



LED States: Red blinking => bnxgsm driver is loaded
Red steady => module loaded but not registered
Green steady => module loaded an registered