



Cloud managed & monitored
VoIP Gateways and Appliances

How to:
Install a PBX on the beroNet appliance



Table of contents

Introduction	3
Requirements	3
1. Boot the appliance from the stick	3
2. Download and install an IPBX	4

Introduction

The beroNet telephony appliance is a full VoIP solution with a beroNet gateway and a server on which it is possible to install different soft PBX.


The appliance is sold with a USB stick on which it is possible to install different soft PBX. This how aims at explaining how to install a PBX on the appliance.

Requirements


- 1 beroNet telephony appliance Revision 2.0
- 1 beroNet USB boot-stick
- An Internet connection for the appliance via Ethernet cable

1. Boot the appliance from the stick

Plug the USB key in the appliance and boot the appliance from the USB connection. Once the appliance has booted up, it is possible to find from another computer via the network center. Otherwise, if a screen is plugged to the appliance, it shows the IP address from which it is possible to access the “beroNet Appliance Installer”.

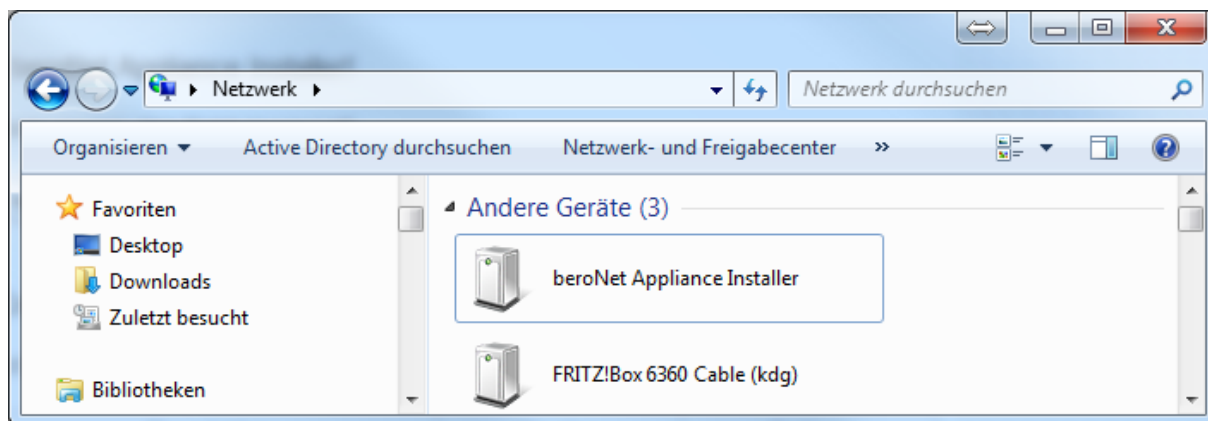


By double clicking on “beroNet appliance Installer”, your favorite webbrowser should open the following webpage:

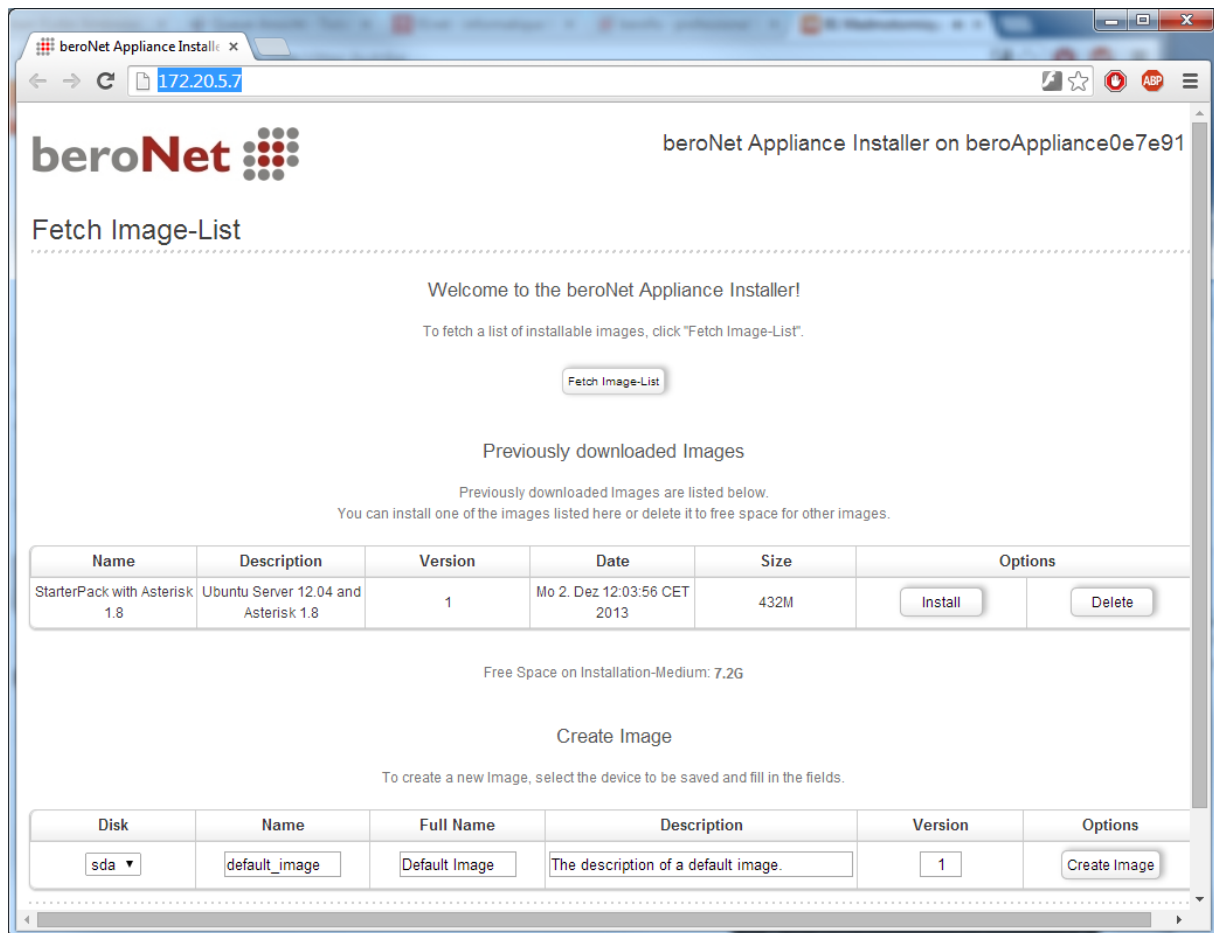

2. Download and install an IPBX


An image of Asterisk is installed by default on the stick. In order to have access to other images, click on “Fetch Image-list”.

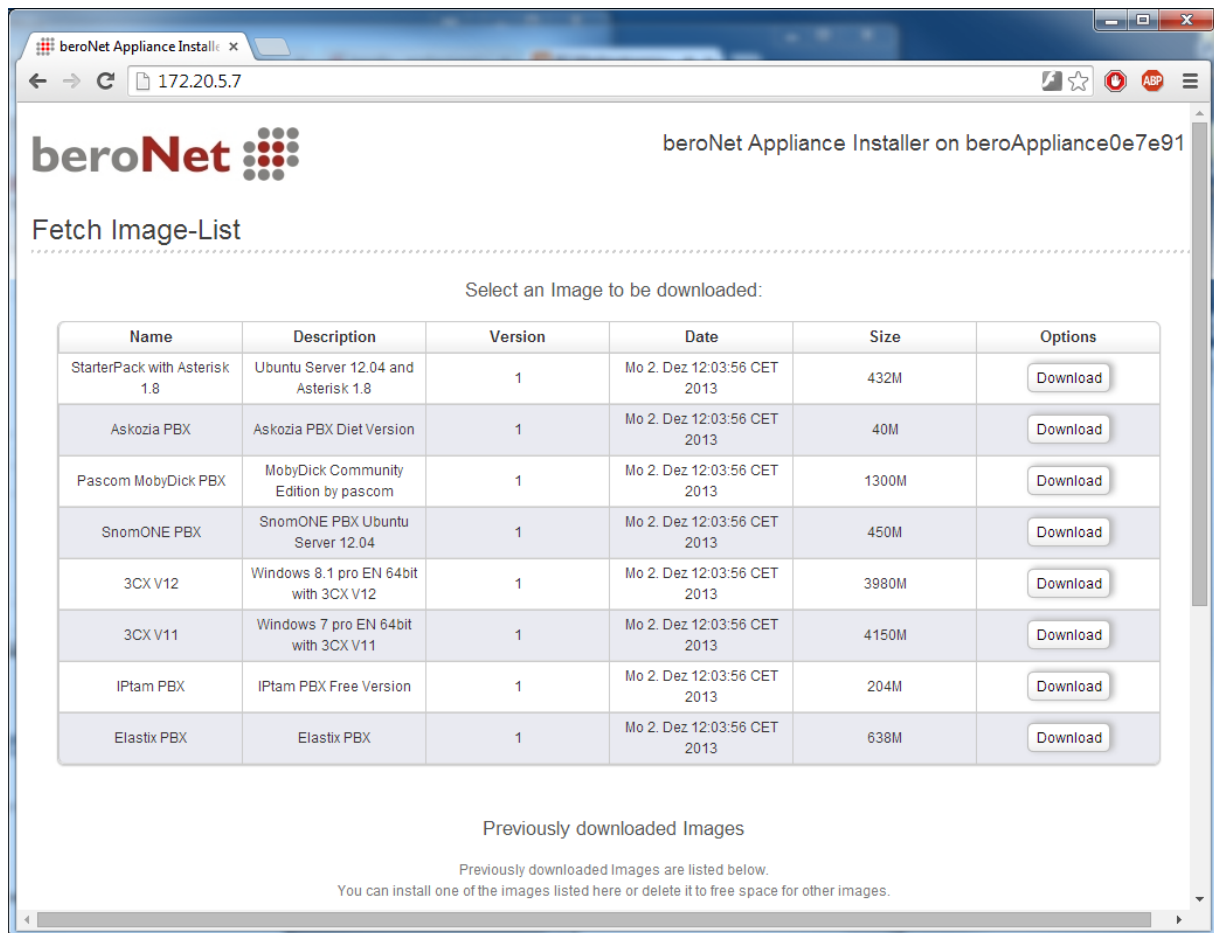

Once the list has appeared, click on the image you want to install on the appliance. Wait while the image is being downloaded.

Install the PBX

Once the download is over, click on “install x” in order to launch the installation:

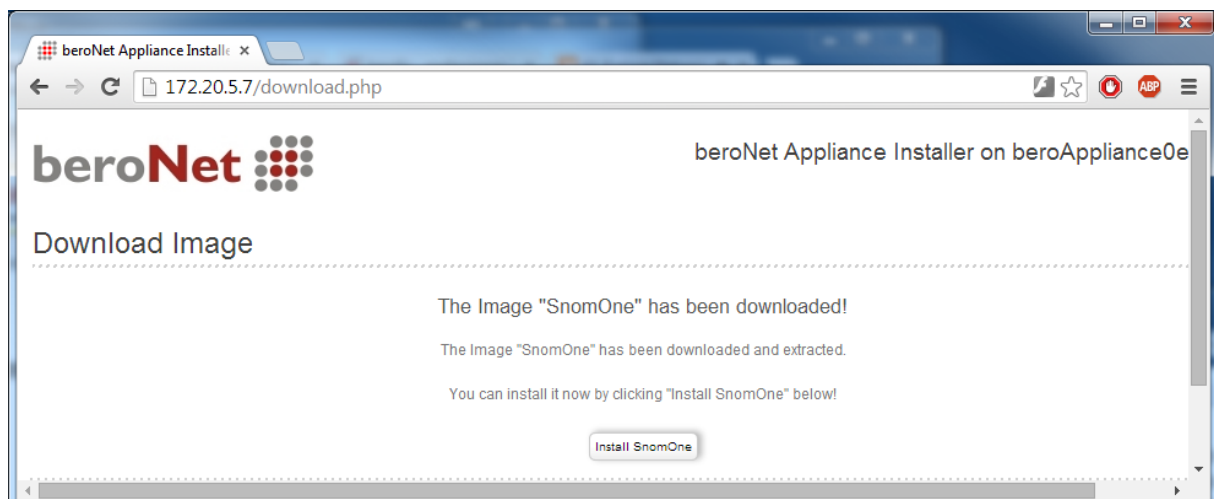

Wait until the application is over and start configuring the software.

