



How to setup a beroFix gateway in Microsoft LYNC Server

1. Topology Builder Setup


In Topology Builder click on PSTN gateways, and then on New IP/PSTN Gateway.

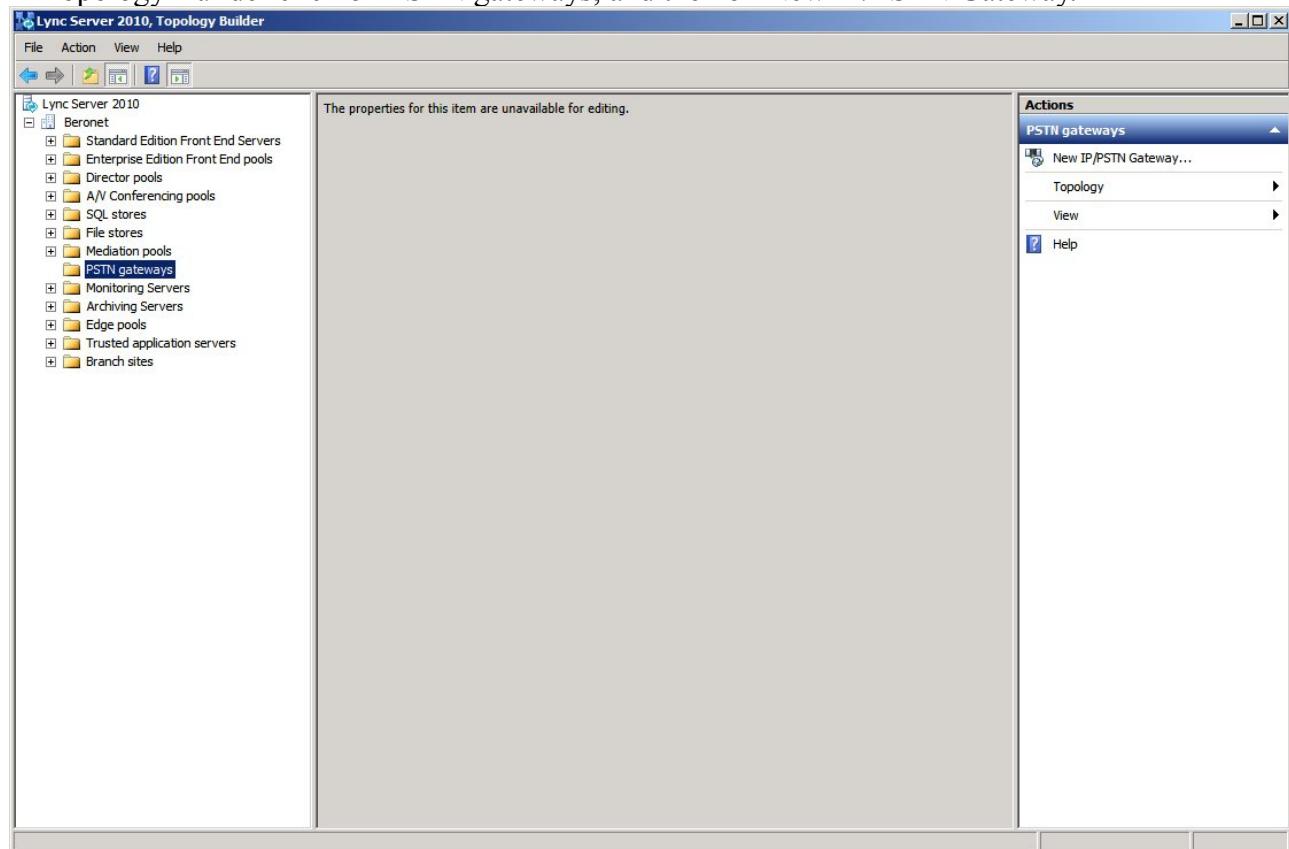


Set the IP address and listening port of the beroFix gateway.

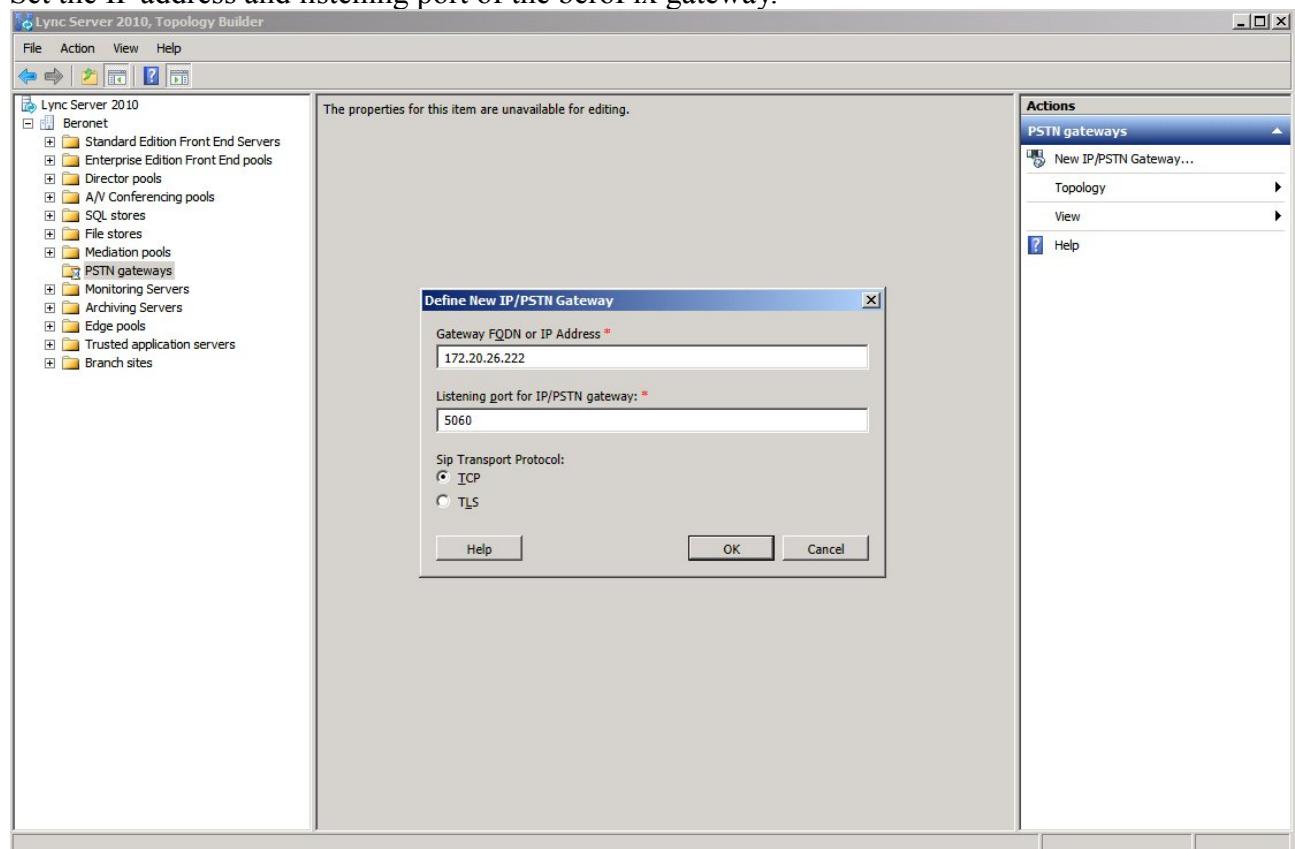

In the Mediation Pools section click on Edit Properties.

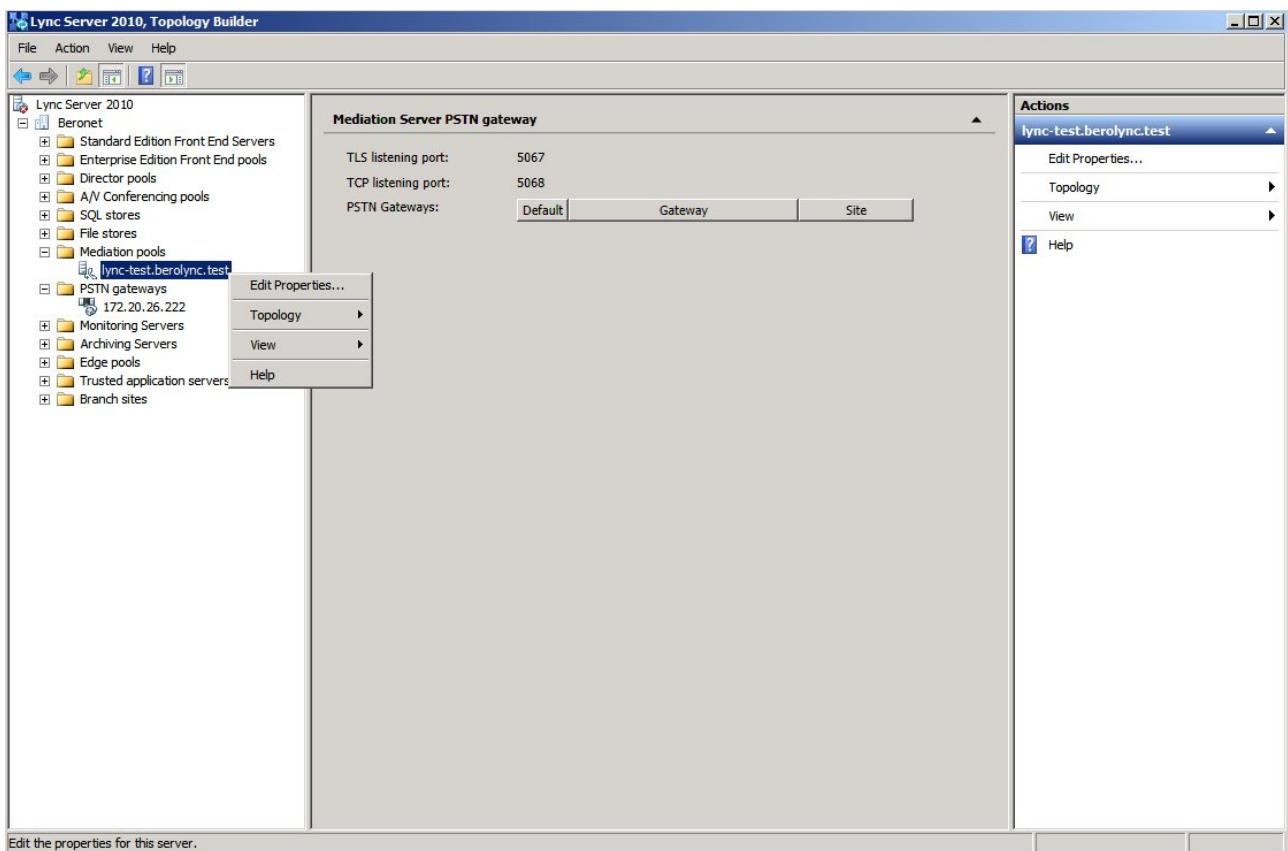

Associate the gateway to the Mediation Server.

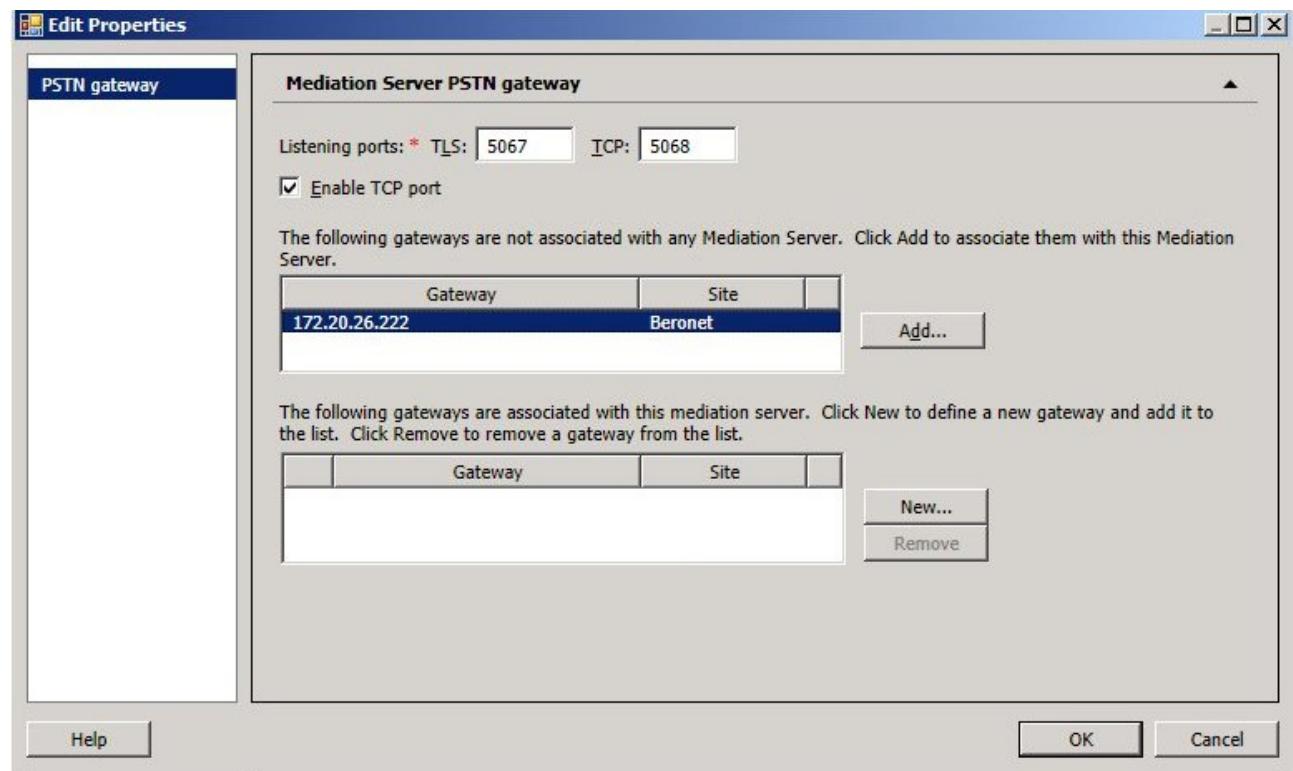

2. Configuring LYNC server 2010.

Enable users for LYNC.

The screenshot shows the Microsoft Lync Server 2010 Control Panel. The left sidebar has a yellow background and contains the following navigation items:


- Home
- Users** (highlighted in yellow)
- Topology
- IM and Presence
- Voice Routing
- Voice Features
- Response Groups
- Conferencing
- Clients
- External User Access
- Monitoring and Archiving
- Security
- Network Configuration

The main pane is titled "User Search" and contains the following search interface:

- Search methods: Search (radio button selected) and LDAP search.
- Search bar: "Search for users by typing a user's name or clicking Add filter".
- Buttons: Find, + Add filter, and a dropdown menu.
- Search results: 2
- Table header: Display name, Enabled, SIP address, Registrar pool, Telephony.
- Table data:

Display name	Enabled	SIP address	Registrar pool	Telephony
Administrator	✓	sip:administrator@sip.berolync.test	lync-test.berolync.test	Enterprise Voice
testuser	✓	sip:testuser@sip.berolync.test	lync-test.berolync.test	Enterprise Voice

Edit the users and assign a Line URI. Invites from the gateway with this number as To User will be forwarded to this account.

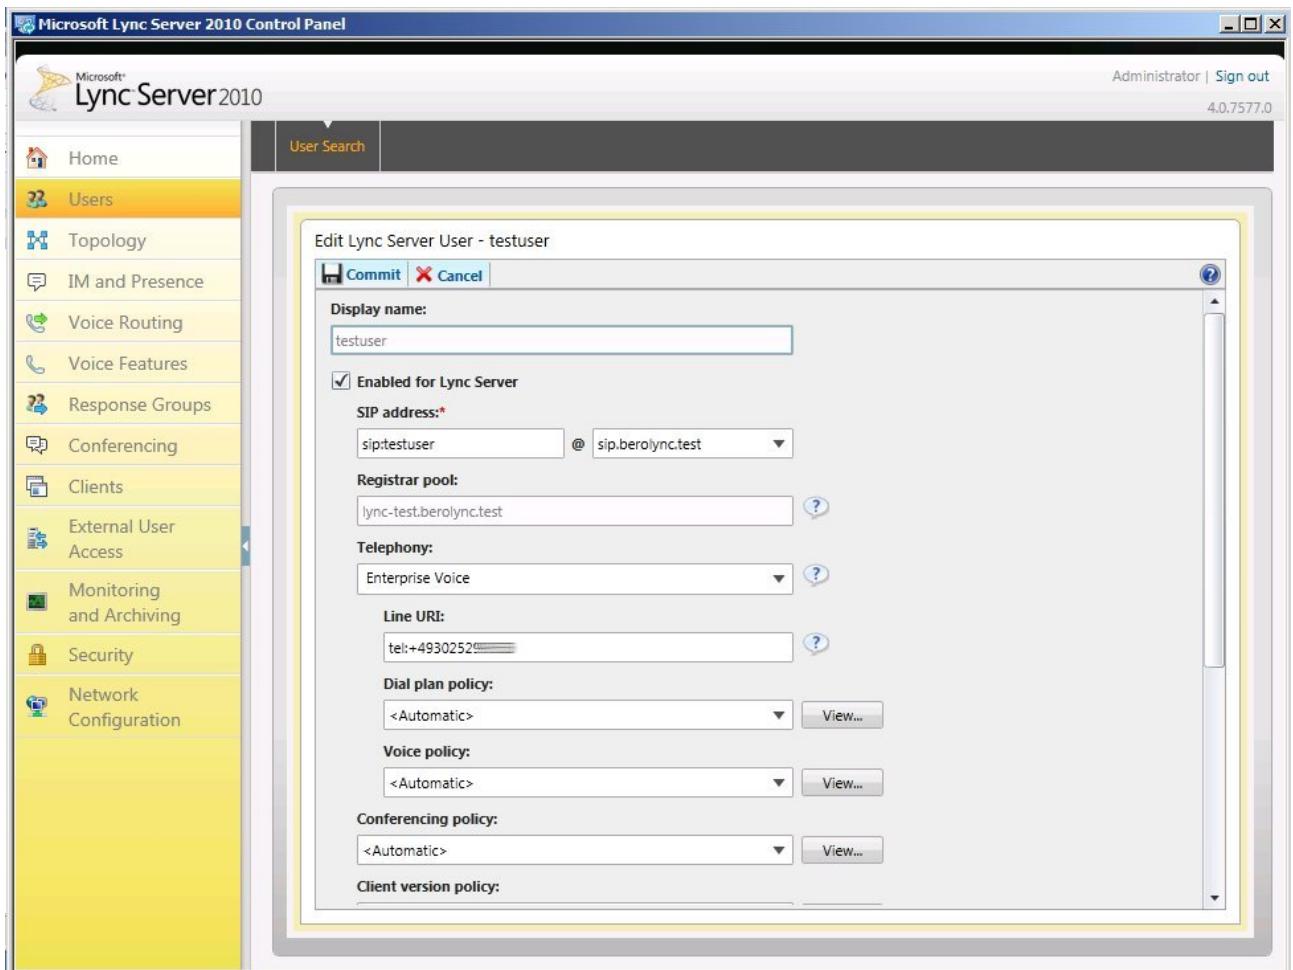

Double click on your site to edit it.


The screenshot shows the Microsoft Lync Server 2010 Control Panel. The left sidebar contains a navigation menu with the following items:

- Home
- Users
- Topology
- IM and Presence
- Voice Routing
- Voice Features
- Response Groups
- Conferencing
- Clients
- External User Access
- Monitoring and Archiving
- Security
- Network Configuration


The "Voice Routing" item is highlighted with a yellow background. The main pane shows the "Voice Policy" tab selected. A sub-section titled "Create voice routing test case information" is visible. Below it is a table titled "New" showing two entries:

Name	Scope	State	PSTN usage	Description
Global	Global	Committed		
Beronet	Site	Committed		


TypeNow click on Associated PSTN Usages +New.

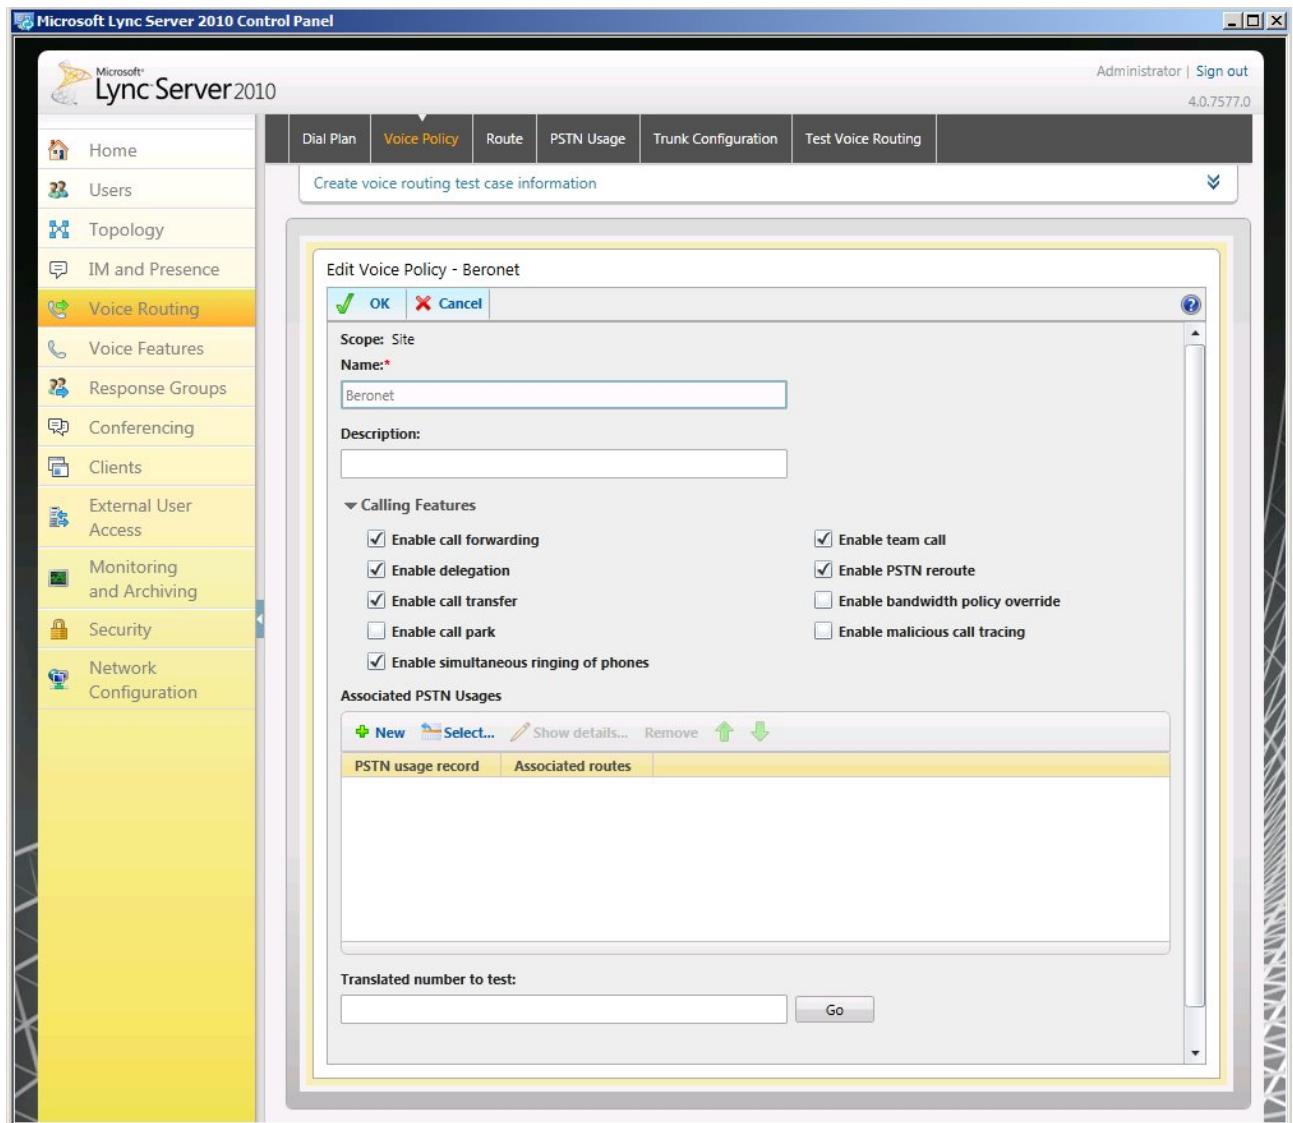


Create a new record, e.g. name it outbound, then click on +New.

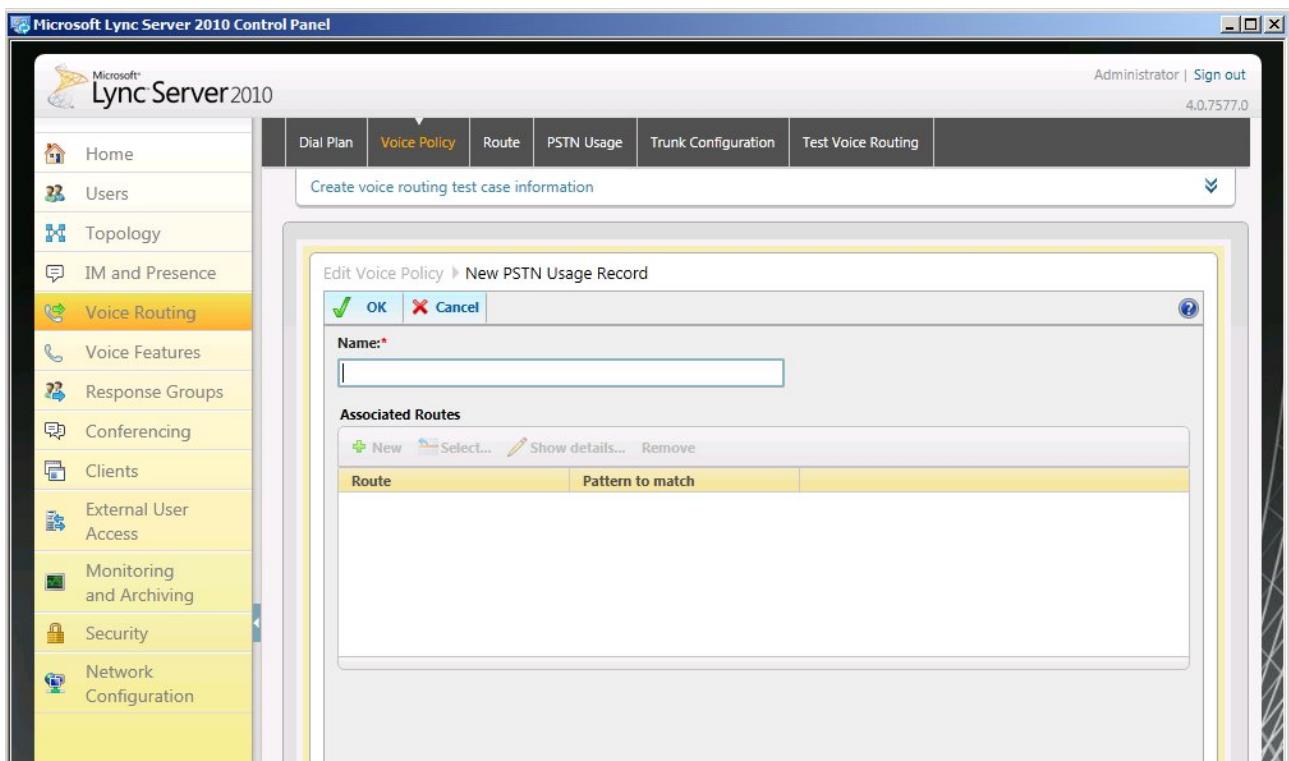


Give it a name, e.g. outbound again, then click next to associated gateways on the Add button.

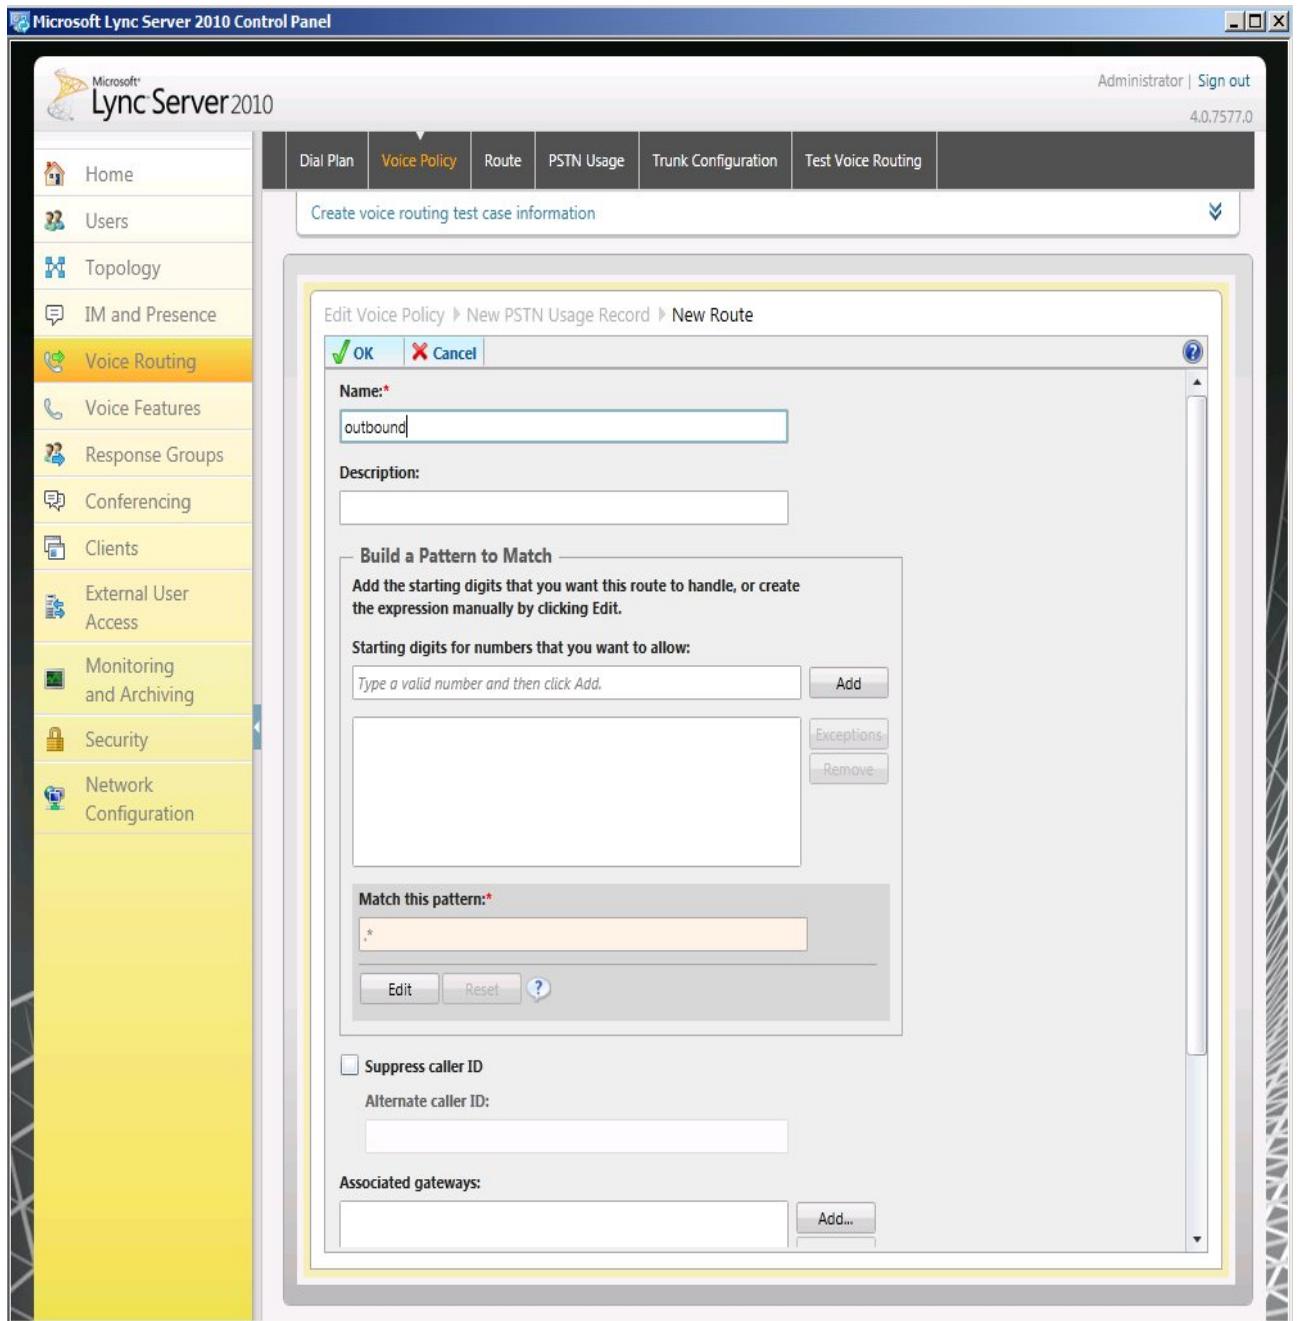

Select the gateway and click on OK.

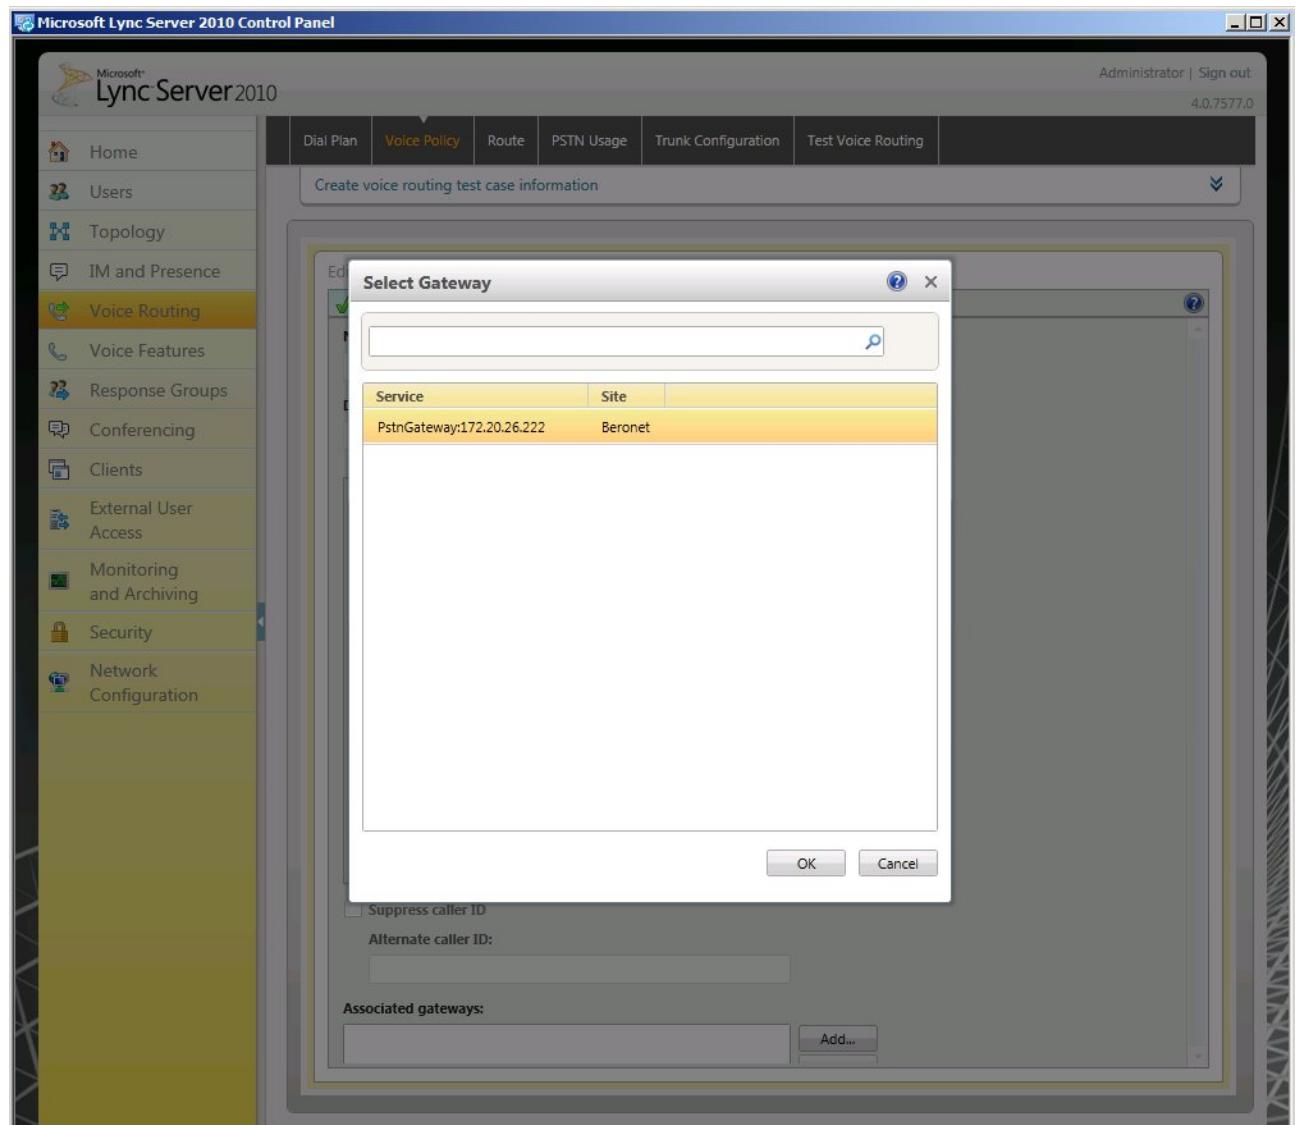

Finished PSTN Usage Record. Click OK.

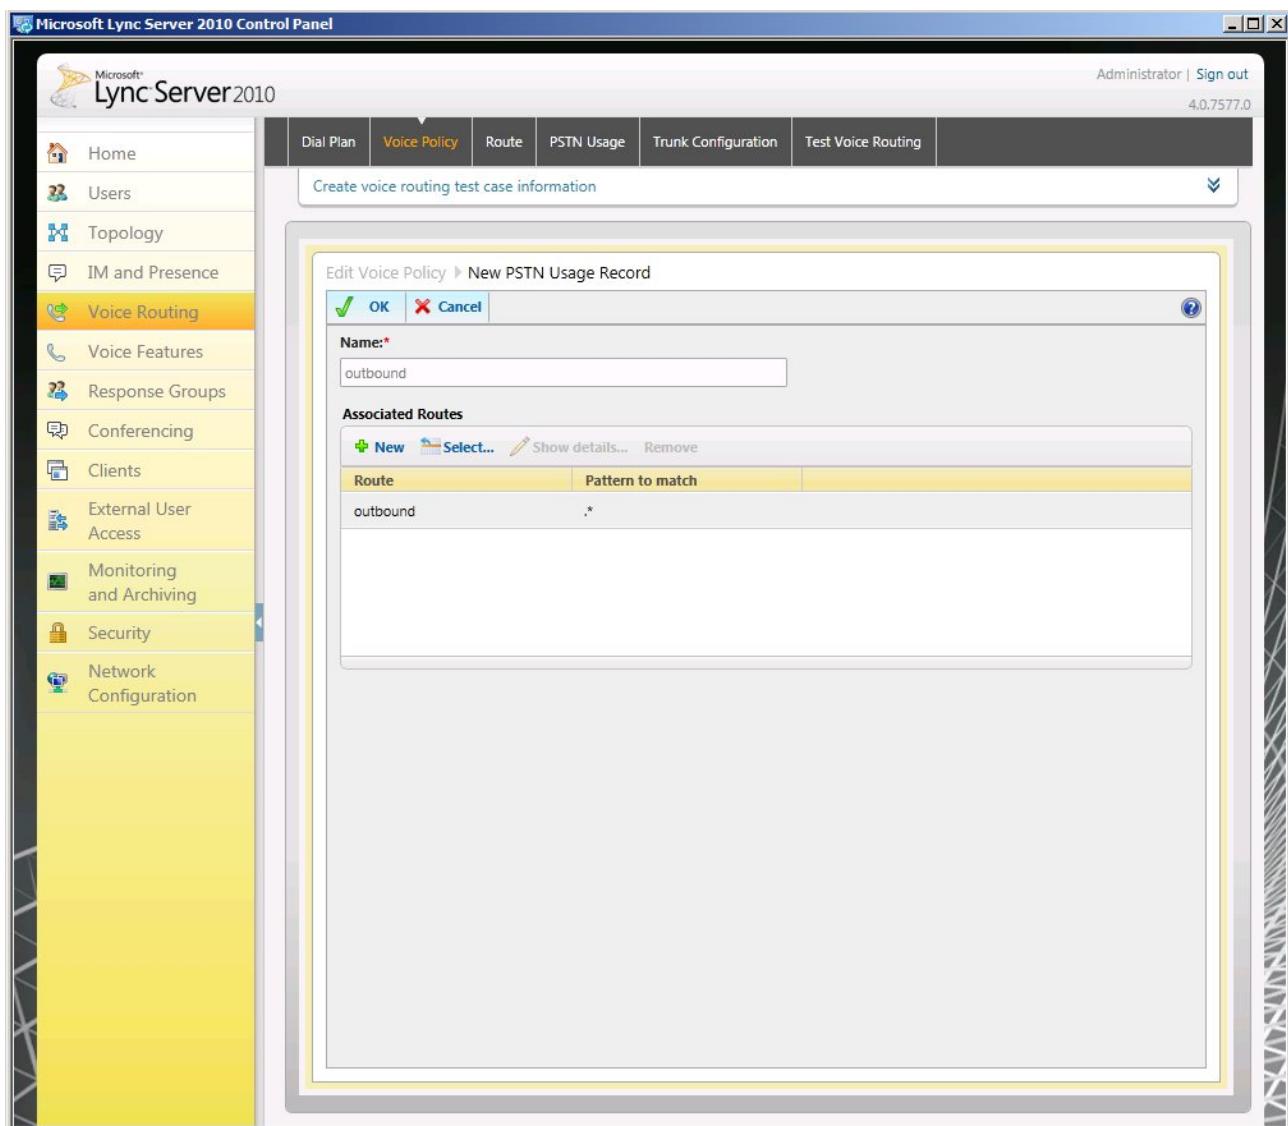


Now the changes have to be committed. Click on Commit.

The screenshot shows the Microsoft Lync Server 2010 Control Panel. The left sidebar contains a navigation menu with items like Home, Users, Topology, IM and Presence, Voice Routing (which is selected), Voice Features, Response Groups, Conferencing, Clients, External User Access, Monitoring and Archiving, Security, and Network Configuration. The main area has a title bar "Microsoft Lync Server 2010 Control Panel" and "Administrator | Sign out 4.0.7577.0". Below the title bar, there are tabs: Dial Plan, Voice Policy (selected), Route, PSTN Usage, Trunk Configuration, and Test Voice Routing. A sub-header "Create voice routing test case information" is visible. In the center, there is a table titled "New" with columns: Name, Scope, State, PSTN usage, and Description. Two rows are present: "Global" (Scope: Global, State: Committed) and "Beronet" (Scope: Site, State: Uncommitted, PSTN usage: outbound).

Name	Scope	State	PSTN usage	Description
Global	Global	Committed		
Beronet	Site	Uncommitted	outbound	

Final Commit screen, click Commit.

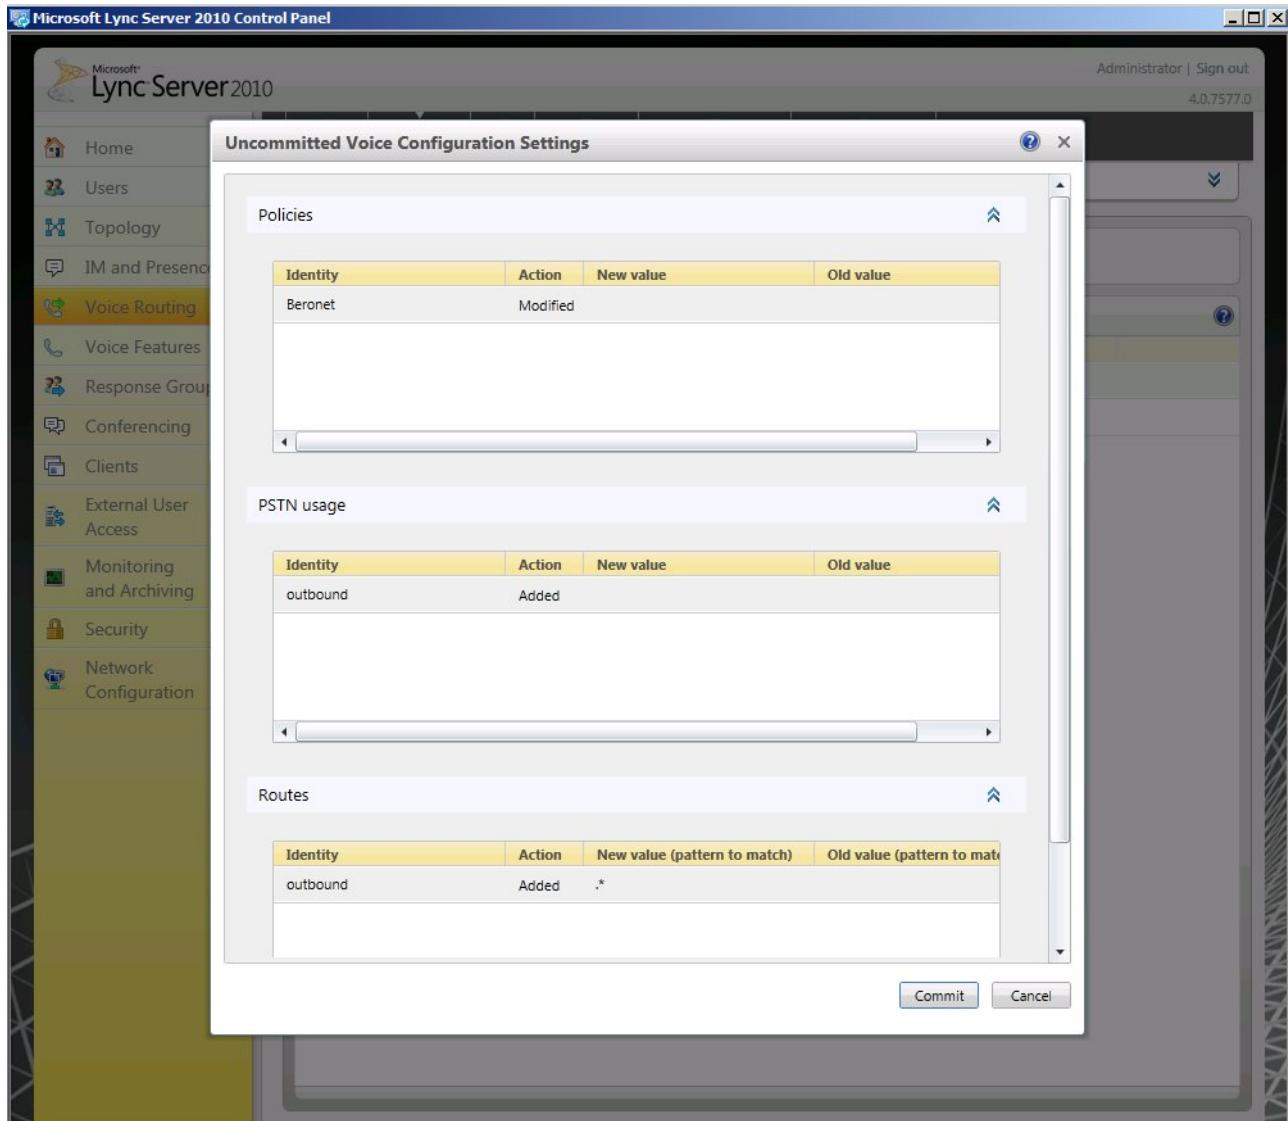

After committing changes it actually takes a while, one or two minutes, until they are active.

3. Configure beroFix

In beroFix you need to configure TCP as SIP Transport Method, you can do that under SIP->General:

The screenshot shows the 'SIP GENERAL CONFIGURATION' page of the bero*fix web interface. The top navigation bar includes links for Dialplan, Sip (selected), PSTN, Hardware, Preferences, Management, and Logout. The Languages section shows English and German flags. The main content area is titled 'Sip General' and contains the following configuration settings:

Sip General	
Bind Port:	5060
RTP Port Range:	6000-7000
Extern IP:	[empty]
TOS RTP:	160
TOS SIP:	160
Preresolve Addresses:	<input checked="" type="checkbox"/>
Reject calls under load:	<input type="checkbox"/>
RTP port selection:	standard
SIP transport:	tcp
Route RTP Traffic through DSP	<input type="checkbox"/>

A 'Save' button is located below the form. At the bottom right are 'Help' and 'beroNet' buttons.

You also need to define a SIP Account for Lync, please note that berofix must not register with Lync, so you need to remove the „register“ option:

