


**Requirements:**

- ▶ BerofixBox
- ▶ BNBFGSMEXTBox – Upgrade Kit
- ▶ BN2GSM

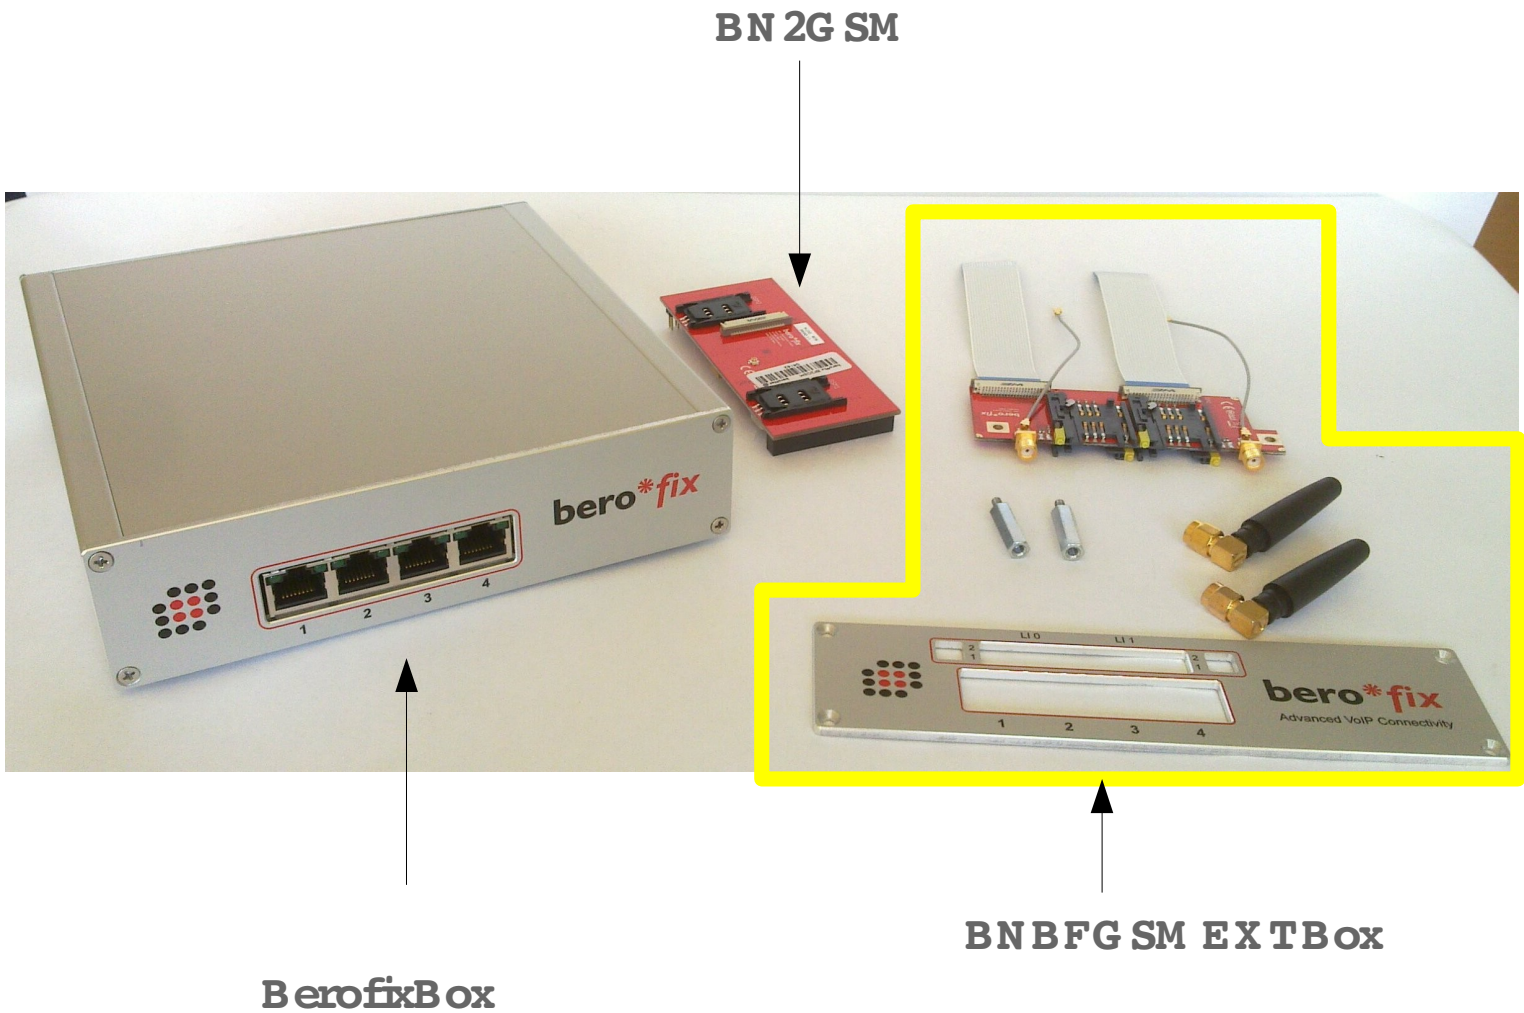


**Screw 1 (2x)**




**Screw 2 (4x)**



1. Open Box

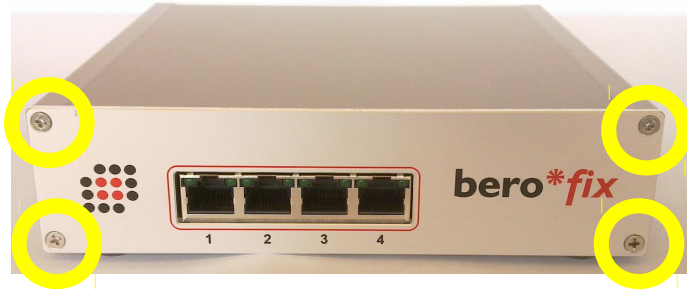


2. Unscrew Screw 1  
Remove BFBridge  
(if present)

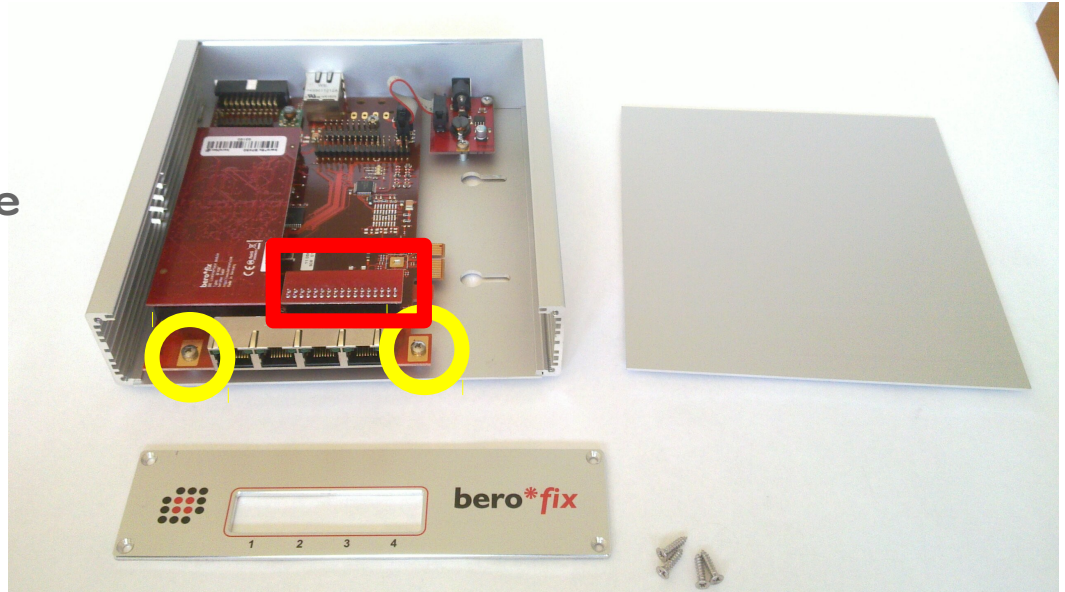


2. Add GSM Screws

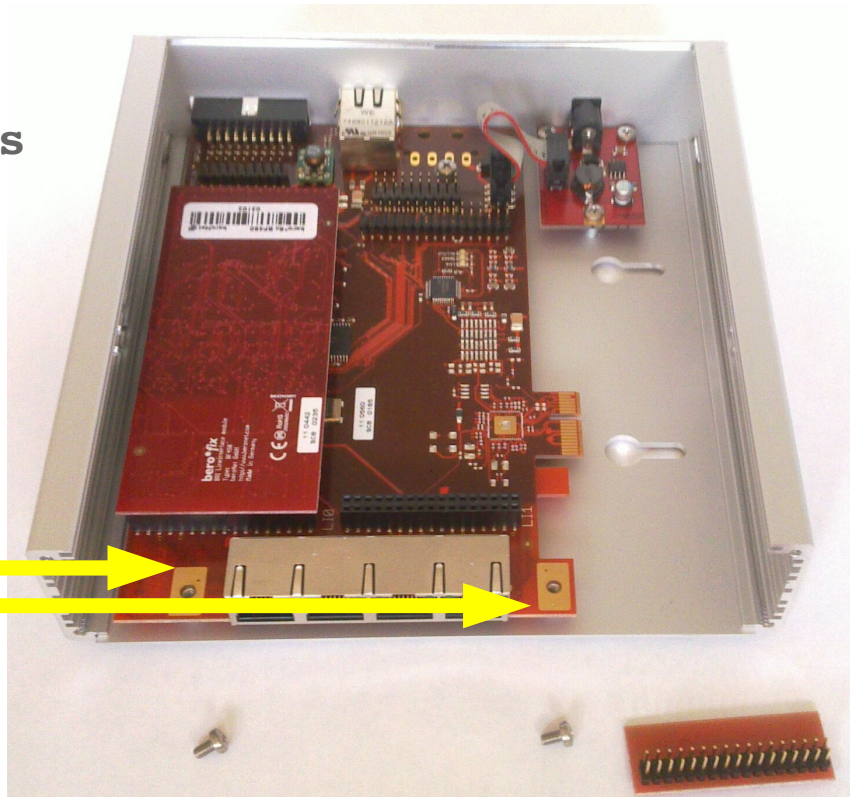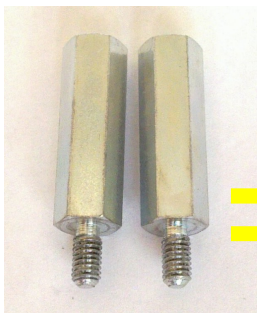


**4. Add BF2GSM Module**

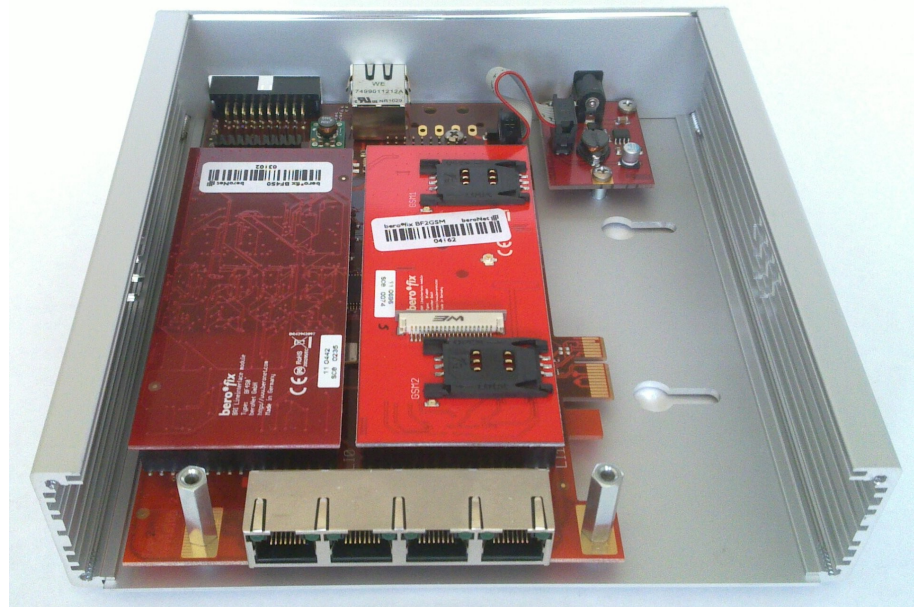


**5.0 pen Cable  
Connector**

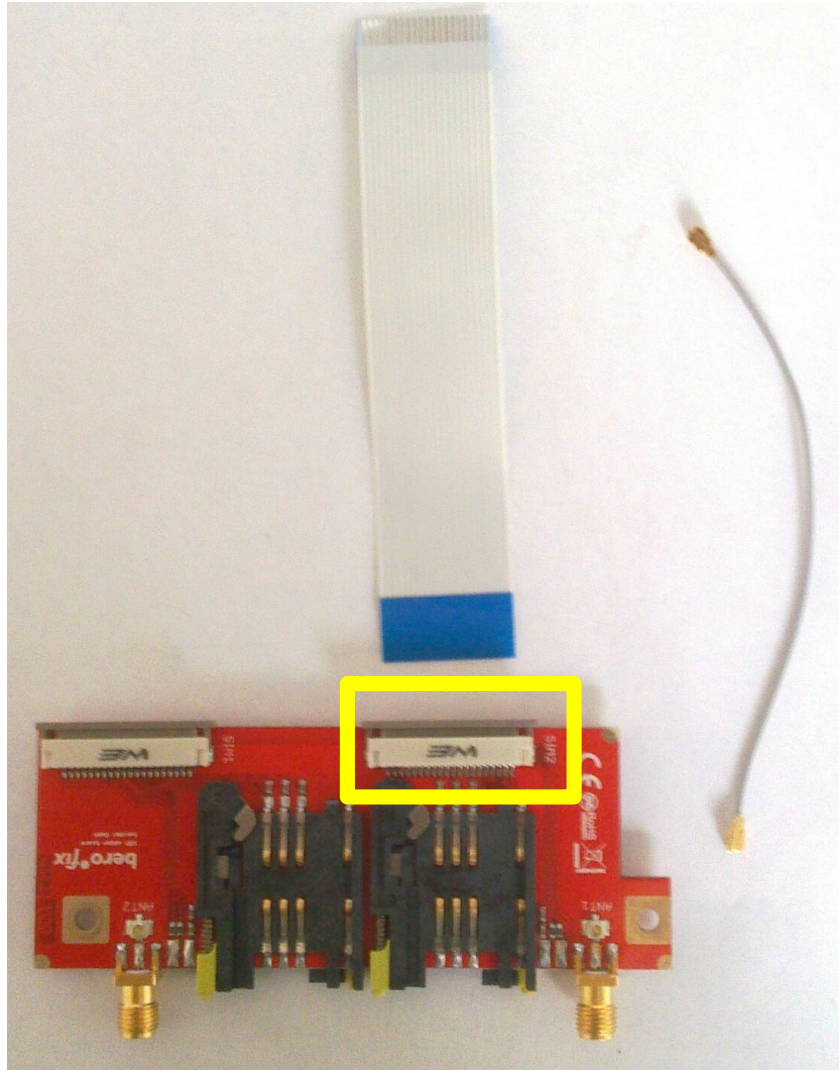

**6. Insert Inter-  
connection Cable  
Plug in Antenna  
Cable**

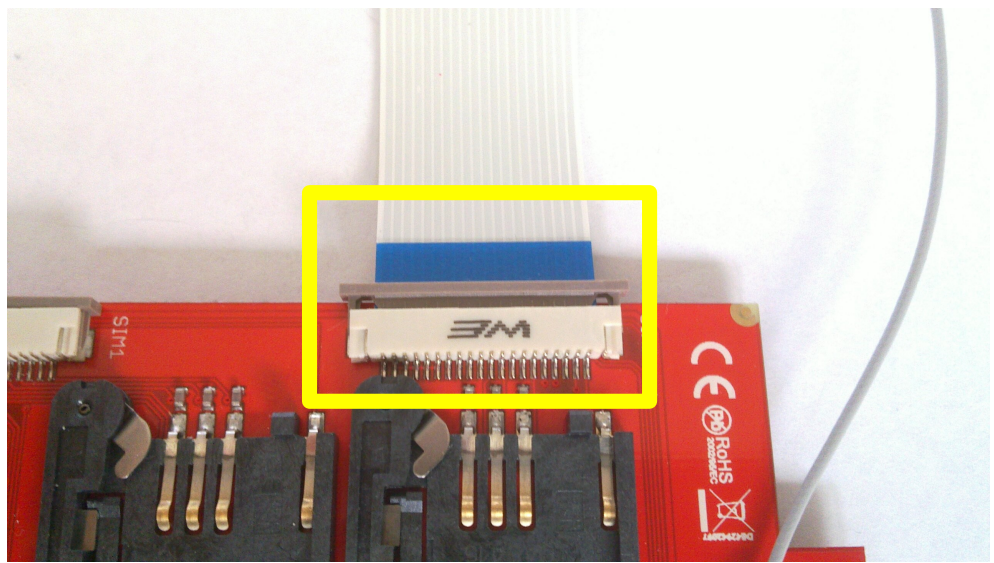


**7. Connect Cable Connector**

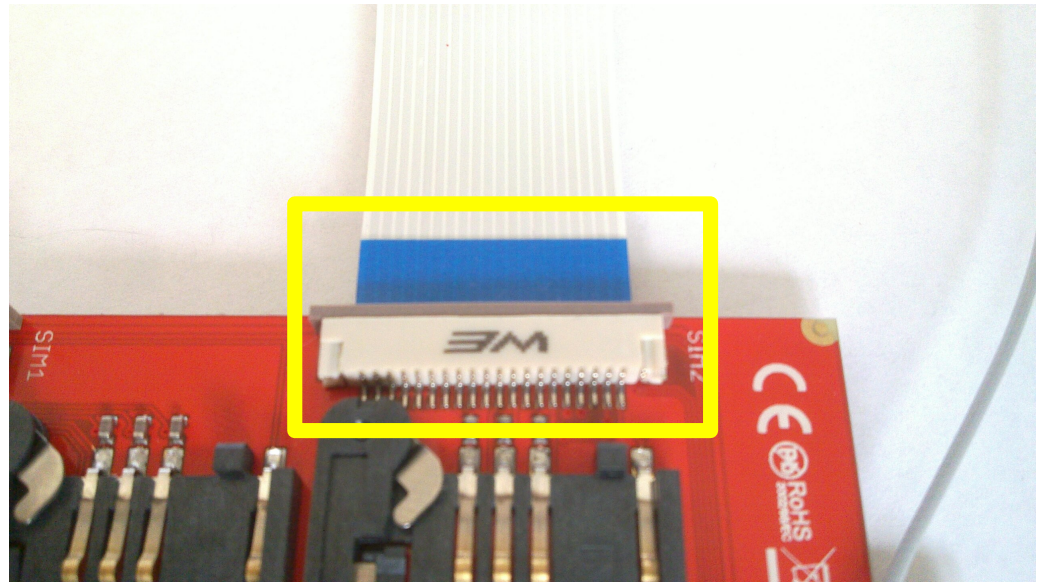

**8. Install BNFEXT GSM In the BeroFix Box and Screw it with Screws 1.**

**9. Connect Antenna Cable On GSM Module**

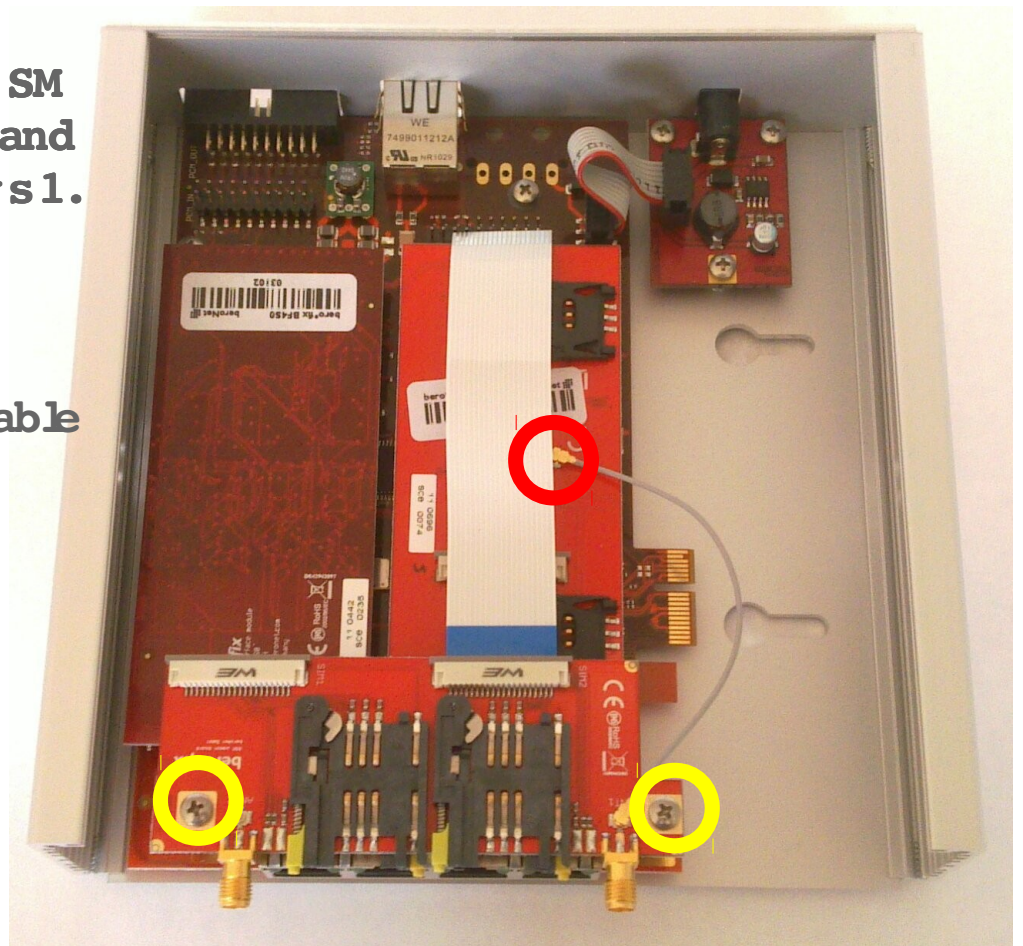


**10. Connect Interconnection  
Cable with Module**



**11. Close Box**



**12. Add Antenna**

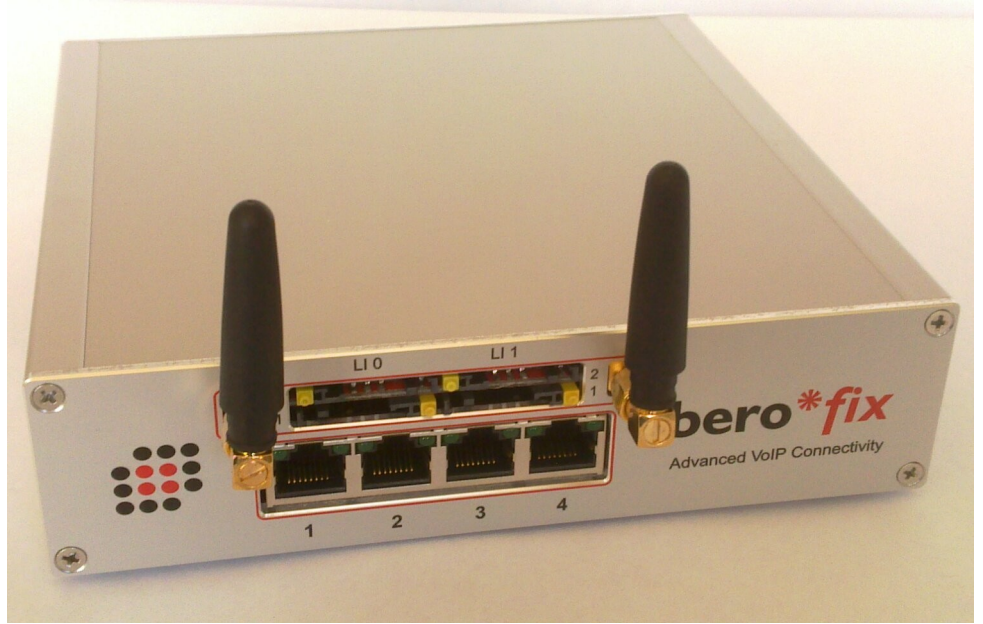

**13. Insert SIM s**

